

MASTER A MILLION™

How long will it take you to bounce to a Million?

FREE APP



Download on the App Store

GET IT ON Google play

5+

DATA CHARGES MAY APPLY. ASK A PARENT FOR PERMISSION. MAY NOT BE COMPATIBLE WITH ALL iOS AND ANDROID DEVICES.

SUPPORTED OPERATING SYSTEMS:
• iOS 9 & HIGHER
• ANDROID 5 API LEVEL 19 "KITKAT" & HIGHER



Includes:

- 1 Master A Million™ Ball
- with Auxiliary Cord
- 1 3V (CR2032) Button Cell Alkaline Battery

TRACK YOUR BOUNCES AND SEE WHERE YOU RANK IN THE WORLD

www.masteramillion.com

 
BATTERY INSTALLATION INSTRUCTIONS

Batteries included are for "Try Me" purposes. If performance diminishes after purchase, replace with fresh. Requires 1 x DC 3.0V, CR2032 battery (included).



ADULT INSTALLATION REQUIRED

1. Locate battery compartment at the back.
2. Use a coin to separate cover and a screwdriver (not included) to pull out cover.
3. Using a Phillips Head screwdriver (not included) remove the screw and battery cover.
4. Install new battery.
5. Replace the battery cover, the screw, and the outer cover.

* If you experience screen problems such as ghosting, fading or no backlight, batteries may need to be c

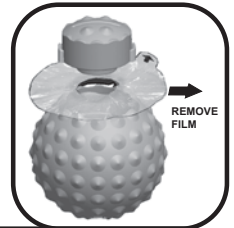

BATTERY INSTALLATION INSTRUCTIONS

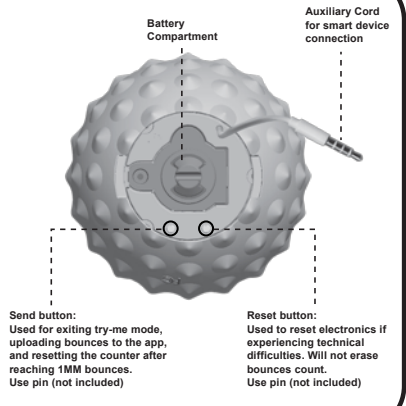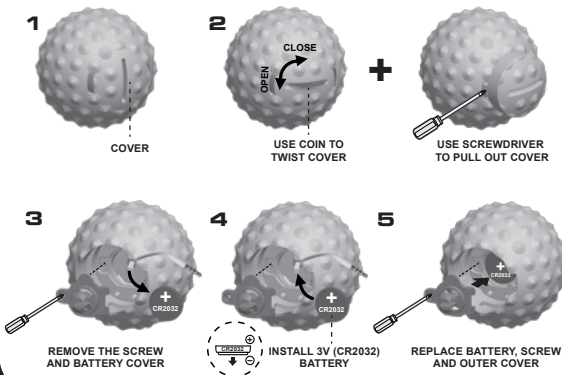  

HARDWARE SPECIFICATIONS:

- Operating Voltage and Battery Type: 3.0V, CR2032
- Operating Current: below 30mA
- Standby Current: below 10uA
- Try Me Mode: Yes
- Built-in Auxiliary Cord used to communicate with smart device to sync bounces in the app.
- Each ball will have a unique ID number which will link up to the username during registration process.
- 7 Digit LCD with RGB LED backlight
- Built-in eeprom memory to store the counter number

HOW TO PLAY WITH YOUR MASTER A MILLION™ BALL:

To switch the ball from try-me mode to game mode, press and hold the "Send" button for 5 seconds.

1. To sync your ball to your smart device:

- Download the free app and follow the on screen prompts.
- Connect the Auxiliary Cord to the audio socket of your smart device. NOTE: Headphone jack adaptor (not included) may be required if the audio socket of your smart device is not compatible.
- Press the "Send" button to start the data transfer.

2. The LCD counter will increase by 1 after each bounce.

3. If the ball is not used for 10 seconds, the LCD will turn off and the ball will go into sleep mode.

4. The backlight will flash for 3 seconds after each bounce.

5. When the counter reaches each of the below milestones, the LCD display will show the corresponding phrase:

- At 500: YOU ARE JUST WARMING UP
- At 500,000: YOU ARE HALFWAY THERE
- At 1,000,000: YOU ARE THE MASTER (TABLE BOUNCE)

At all of the other 500 bounce intervals, it will display randomly one of the following 15 different phrases:

- KEEP GOING
- BOUNCE FASTER
- NOTHING CAN STOP YOU
- YOU ARE DOING GREAT
- KEEP BOUNCING
- GREAT JOB
- YOU GOT THIS
- AWESOME
- KEEP IT UP
- FANTASTIC
- OUTSTANDING
- YOU CAN DO THIS
- WAY TO GO
- DON'T GIVE UP
- EXCELLENT

6. When the counter reaches each of the below milestones, the LCD display will flash the corresponding backlight color when bouncing:

- 0 to 199,999 bounces: Blue
- 200,000 to 399,999: Purple
- 400,000 to 599,999: Green
- 600,000 to 799,999: Orange
- 800,000 to 999,999: Red

After 1,000,000 bounces, the LEDs will flash all the colors above and it will display "YOU ARE THE MASTER" for each bounce until you reset the counter to zero. The reset counter feature will be activated after 1,000,000 bounces. To reset the counter to zero, press and hold the "Send" Button for 5 seconds.

BATTERY SAFETY INFORMATION



WARNING:

- This product contains a Button or Coin Cell Battery.
- A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Due to chemical burns and potential perforation of the esophagus.
- Dispose of used batteries immediately. Flat/drained batteries can still be dangerous
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If you suspect your child has swallowed or inserted a button battery immediately call the Poisons Control hotline and seek immediate medical attention.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or another mechanical fastener is tightened. Do not use if compartment is not secure.
- Tell others about the risk associated with button batteries and how to keep their children safe

⚠ WARNING: Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. Leaking batteries may make "popping" sounds. Dispose according to Local, State or Federal Battery Laws.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

TO AVOID BATTERY PROBLEMS:

NEVER dispose of batteries in fire, as they may leak and explode.
ALWAYS remove exhausted batteries from toy.
ALWAYS have an adult install batteries consistent with installation instructions.
ONLY use batteries specified by manufacturer.
Batteries are to be inserted with the correct Polarity.
The supply terminals are not to be short-circuited.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are to be removed from the toy before being charged.
Rechargeable batteries are only to be charged under adult supervision.

TM & © 2017 MANUFACTURED BY JAKKS PACIFIC, INC., 2951 28TH STREET, SANTA MONICA, CA 90405 U.S.A.

All other symbols, marks, logos, and designs (collectively "Trademarks") are Trademarks of and proprietary to their respective owners and used under license.

MADE IN CHINA

Contents may vary in style, color, shape and decoration from images shown on package or in advertising.

Questions or comments? www.jakks.com, consumers@jakks.com, or 1-877-875-2557 in North America.

For warranty information, visit www.jakks.com/warranty

ATTENTION! Remove and discard packaging ties and fasteners before giving product to child.

Retain packaging since it contains important information.

PATENT PENDING



Scan here for more information



www.jakks.com - Nasdaq:JAKK

Google Play is a trademark of Google Inc.
Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.
App Store is a service mark of Apple Inc.

